

RT 125 D Serviceskema

⊙ ENGINE

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Air cleaner element	Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe nuts and muffler mounting bolts ★	Tighten	Tighten	—
Valve clearance adjust ★	Inspect	Inspect	—
Cylinder head nut ★	Tighten	Tighten	—
Cylinder head & Cylinder ★	—	—	Remove carbon
Spark plug	Clean	Clean	Replace
Fuel hose	Inspect	Inspect	—
	Replace every 4 years		
Engine oil filter	Replace	Replace	—
Engine oil	Replace	Replace	—
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	Inspect	—

⊙ CHASSIS

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Drive chain ★	Clean and lubricate every 1,000 km		
Brake ★	Inspect	Inspect	—
Brake hose ★	Inspect	Inspect	—
	Replace every 4 years		
Brake fluid ★	Inspect	Inspect	—
	Replace every 2 years		
Tire	Inspect	Inspect	—
Steering ★	Inspect	Inspect	—
Front forks ★	—	Inspect	—
Rear shock absorber ★	—	Inspect	—
Chassis nuts and bolts ★	Tighten	Tighten	—

N O T E

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

RX 125 D+SM

Serviceskema

⊙ ENGINE

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Air cleaner element	Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe bolts and muffler mounting bolts ★	Tighten	Tighten	—
Valve clearance adjust ★	Inspect	Inspect	—
Cylinder head bolt ★	Tighten	Tighten	—
Cylinder head & Cylinder ★	—	—	Remove carbon
Spark plug	Clean	Clean	Replace
Fuel hose	Inspect	Inspect	—
	Replace every 4 years		
Engine oil filter	Replace	Replace	—
Engine oil	Replace	Replace	—
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	Inspect	—

⊙ CHASSIS

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Drive chain ★	Clean and lubricate every 1,000 km		
Brake ★	Inspect	Inspect	—
Brake hose ★	Inspect	Inspect	—
	Replace every 4 years		
Brake fluid ★	Inspect	Inspect	—
	Replace every 2 years		
Tire	Inspect	Inspect	—
Steering ★	Inspect	Inspect	—
Front forks ★	—	Inspect	—
Rear shock absorber ★	—	Inspect	—
Chassis nuts and bolts ★	Tighten	Tighten	—
General lubrication	Lubricate	Lubricate	—

N O T E

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

MS3-250

Serviceskema

⊙ ENGINE

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Air cleaner element	Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe nuts and muffler mounting bolts ★	Tighten	Tighten	—
Valve clearance adjust ★	Inspect	Inspect	—
Cylinder head bolt ★	Tighten	Tighten	—
Spark plug	Clean	Clean	Replace
Fuel hose	Inspect	Inspect	—
	Replace every 4 years		
Engine oil filter	Replace	Replace	—
Engine oil	Replace	Replace	—
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Engine coolant ★	Replace every 2 years		
Radiator hose ★	—	Inspect	—
	Replace every 4 years		
Transmission oil ★	Inspect	—	Inspect
Drive belt ★	—	—	Inspect

⊙ CHASSIS

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Brake ★	Inspect	Inspect	—
Brake hose ★	Inspect	Inspect	—
	Replace every 4 years		
Brake fluid ★	Inspect	Inspect	—
	Replace every 2 years		
Tire	Inspect	Inspect	—
Steering ★	Inspect	Inspect	—
Front forks ★	—	Inspect	—
Rear shock absorber ★	—	Inspect	—
Chassis nuts and bolts ★	Tighten	Tighten	—
General lubrication	Lubricate	Lubricate	—

N O T E

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

GV 250 Serviceskema

⊙ ENGINE

Item	Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Air cleaner element		Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe bolts and muffler mounting bolts ★		Tighten	Tighten	—
Valve clearance adjust ★		Inspect	Inspect	—
Spark plug		Clean	Clean	Replace
Fuel hose		Inspect	Inspect	—
		Replace every 4 years		
Engine oil filter		Replace	Replace	—
Engine oil		Replace	Replace	—
Throttle cable		Inspect	Inspect	—
Idle speed		Inspect	Inspect	—
Clutch		Inspect	Inspect	—

⊙ CHASSIS

Item	Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Drive chain		Clean and lubricate every 1,000 km		
Brake ★		Inspect	Inspect	—
Brake hose		Inspect	Inspect	—
		Replace every 4 years		
Brake fluid		Inspect	Inspect	—
		Replace every 2 years		
Tire		Inspect	Inspect	—
Steering ★		Inspect	Inspect	—
Front forks ★		—	Inspect	—
Rear suspension ★		—	Inspect	—
Chassis nuts and bolts ★		Tighten	Tighten	—

CAUTION

More frequent servicing may be performed on motorcycles that are used under severe conditions.

NOTE

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

GT 250 Naked + R

Serviceskema

⊙ ENGINE

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Air cleaner element	Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe bolts and muffler mounting bolts ★	Tighten	Tighten	—
Valve clearance adjust ★	Inspect	Inspect	—
Cylinder head nut ★	Tighten	Tighten	—
Cylinder head & Cylinder ★	—	—	Remove carbon
Spark plug	Clean	Clean	Replace
Fuel hose	Inspect	Inspect	—
	Replace every 4 years		
Engine oil filter	Replace	Replace	—
Engine oil	Replace	Replace	—
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	Inspect	—

⊙ CHASSIS

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Drive chain ★	Clean and lubricate every 1,000 km		
Brake ★	Inspect	Inspect	—
Brake hose ★	Inspect	Inspect	—
	Replace every 4 years		
Brake fluid ★	Inspect	Inspect	—
	Replace every 2 years		
Tire	Inspect	Inspect	—
Steering ★	Inspect	Inspect	—
Front forks ★	—	Inspect	—
Rear shock absorber ★	—	Inspect	—
Chassis nuts and bolts ★	Tighten	Tighten	—

N O T E

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

GV 650 Serviceskema

⊙ ENGINE

Item \ Interval	First 1,000 km	Every 6,000 km	Every 12,000 km
Air cleaner element	Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe bolts and muffler mounting bolts ★	Tighten	Tighten	—
Valve clearance adjust ★	Inspect	Inspect	—
Cylinder head bolt ★	Tighten	Tighten	—
Cylinder head & Cylinder ★	—	—	Remove carbon
Spark plug	Clean	Clean	Replace
Fuel hose	Inspect	Inspect	—
	Replace every 4 years		
Engine oil filter	Replace	Replace	—
Engine oil	Replace	Replace	—
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	Inspect	—
Engine coolant ★	Replace every 2 years		
Radiator hose ★	—	Inspect	—
	Replace every 4 years		

⊙ CHASSIS

Item \ Interval	First 1,000 km	Every 6,000 km	Every 12,000 km
Drive belt ★	Inspect every 1,000 km		
Brake ★	Inspect	Inspect	—
Brake hose ★	Inspect	Inspect	—
	Replace every 4 years		
Brake fluid ★	Inspect	Inspect	—
	Replace every 2 years		
Tire	Inspect	Inspect	—
Steering ★	Inspect	Inspect	—
Front forks ★	—	Inspect	—
Rear shock absorber ★	—	Inspect	—
Chassis nuts and bolts ★	Tighten	Tighten	—

N O T E

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

ST 7 Serviceskema

⊙ ENGINE

Item	Interval	First 1,000 km	Every 6,000 km	Every 12,000 km
Air cleaner element		Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe bolts and muffler mounting bolts ★		Tighten	Tighten	—
Valve clearance adjust ★		Inspect	Inspect	—
Cylinder head bolt ★		Tighten	Tighten	—
Spark plug		Clean	Clean	Replace
Fuel hose		Inspect	Inspect	—
		Replace every 4 years		
Engine oil		Replace	Replace	—
Engine oil filter		Replace	Replace	—
Throttle cable		Inspect	Inspect	—
Idle speed ★		Inspect	Inspect	—
Clutch ★		Inspect	Inspect	—
Engine coolant ★		Replace every 2 years		
Radiator hose ★		—	Inspect	—
		Replace every 4 years		

⊙ CHASSIS

Item	Interval	First 1,000 km	Every 6,000 km	Every 12,000 km
Drive belt ★		Inspect every 1,000 km		
Brake ★		Inspect	Inspect	—
Brake hose ★		Inspect	Inspect	—
		Replace every 4 years		
Brake fluid ★		Inspect	Inspect	—
		Replace every 2 years		
Tire		Inspect	Inspect	—
Steering ★		Inspect	Inspect	—
Front forks ★		—	Inspect	—
Rear shock absorber ★		—	Inspect	—
Chassis nuts and bolts ★		Tighten	Tighten	—
General lubrication		Lubricate	Lubricate	—

N O T E

“★”: Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

GT 650

Serviceskema Euro 2 + Euro 3

⊙ ENGINE

Item \ Interval	First 1,000 km	Every 6,000 km	Every 12,000 km
Air cleaner element	Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe bolts and muffler mounting bolts ★	Tighten	Tighten	—
Valve clearance adjust ★	Inspect	Inspect	—
Cylinder head bolt ★	Tighten	Tighten	—
Cylinder head & Cylinder ★	—	—	Remove carbon
Spark plug	Clean	Clean	Replace
Fuel hose	Inspect	Inspect	—
	Replace every 4 years		
Engine oil filter	Replace	Replace	—
Engine oil	Replace	Replace	—
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	Inspect	—
Engine coolant ★	Replace every 2 years		
Radiator hose ★	—	Inspect	—
	Replace every 4 years		

⊙ CHASSIS

Item \ Interval	First 1,000 km	Every 6,000 km	Every 12,000 km
Drive chain ★	Clean and lubricate every 1,000 km		
Brake ★	Inspect	Inspect	—
Brake hose ★	Inspect	Inspect	—
	Replace every 4 years		
Brake fluid ★	Inspect	Inspect	—
	Replace every 2 years		
Tire	Inspect	Inspect	—
Steering ★	Inspect	Inspect	—
Front forks ★	—	Inspect	—
Rear shock absorber ★	—	Inspect	—
Chassis nuts and bolts ★	Tighten	Tighten	—

N O T E

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

INSPECTION AND MAINTENANCE

MAINTENANCE SCHEDULE

Perform maintenance according to time interval.

■ ENGINE

Item \ Interval	Every 500 km or 1 month	Every 2500 km or 6 months	Every 5000 km or 12 months
Air cleaner element	—	Clean	—
Exhaust pipe nuts and muffler bolts ★	Tighten	Tighten	—
Valve clearance ★	Inspect	—	Inspect
Spark plug	—	—	Inspect
	Replace every 18 months		
Fuel hose ★	—	Inspect	—
	Replace every 4 years		
Engine oil and oil filter	Replace	—	Replace
Engine oil hoses	Inspect	Inspect	—
Spark arrester	—	—	Clean
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	—	Inspect
Engine coolant ★	Replace every 2 years		
Radiator hoses ★	—	—	Inspect
	Replace every 4 years		

■ CHASSIS

Item \ Interval	Initial 1 month	Every 3 months	Every 6 months
Drive chain ★	Inspect every time before riding		
Brakes ★	Inspect	Inspect	—
Brake hose ★	—	—	Inspect
	Replace every 4 years		
Brake fluid ★	—	Inspect	—
	Replace every 2 years		
Tires	—	Inspect	—
Steering ★	Inspect	Inspect	—
Suspensions ★	—	—	Inspect
Front and Rear wheel set nuts	Tighten every time before riding		
Rear axle nut and lock nut ★	Tighten	Tighten	—
Chassis nuts and bolts ★	Tighten	Tighten	—
General lubrication	Lubricate	Lubricate	—

NOTE

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

PERIODIC MAINTENANCE CHART

⊙ ENGINE

Item \ Interval	Initial 1 month	Every 3 months	Every 6 months
Air cleaner element	Clean at least every month		
Cylinder head nut *	Tighten	Tighten	—
Cylinder head and cylinder *	—	—	Remove carbon
Carburetor	Inspect	—	Inspect
Spark plug	Clean	Clean	Replace
Fuel line	Inspect	Inspect	
	Replace every 4 years		
Transmission oil *	Inspect		Inspect
Drive chain	Inspect and lubricate every month		
Sprockets *	Inspect	Inspect	
Gear shift shaft *	Inspect	Inspect	

⊙ CHASSIS

Item \ Interval	Initial 1 month	Every 3 months	Every 6 months
Brakes	Inspect	Inspect	—
Steering *	Inspect	Inspect	—
Tires	Inspect every month · Check pressure each time ride		
Chassis nuts and bolts *	Tighten	Tighten	—
General lubrication *	—	Lubricate	—

CAUTION

More frequent servicing may be performed on motorcycles that are used under severe conditions.

N O T E

* = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

PERIODIC MAINTENANCE CHART

ENGINE

Item \ Interval	Initial 1 month	Every 3 months	Every 6 months
Air cleaner element	Clean at least every month		
Cylinder head nuts*	Tighten	Tighten	—
Cylinder head and cylinder*	—	—	Remove carbon
Carburetor	Inspect	—	Inspect
Spark plug	Clean	Clean	Replace
Fuel line	Inspect	Inspect	—
	Replace every 4 years		
Transmission oil	Replace	—	Replace
Drive chain	Inspect and lubricate every month		
Sprockets*	Inspect	Inspect	—

CHASSIS

Item \ Interval	Initial 1 month	Every 3 months	Every 6 months
Brakes	Inspect	Inspect	—
Steering*	Inspect	Inspect	—
Tires	Inspect every month · Check pressure each time ride		
Chassis nuts and bolts*	Tighten	Tighten	—
General lubrication*	—	Lubricate	—

CAUTION

More frequent servicing may be performed on motorcycles that are used under severe conditions.

NOTE

★ = Ask your **HYOSUNG** dealer or qualified mechanic to do the maintenance items marked.